

## TERRA SERIES\* SERVICE PARTS

		TERRA 2500 Part # 1125260	TERRA 2500SR Part # 1125270	TERRA 3500 Part # 1135260	TERRA 3500SR Part # 1135270	TERRA 4500 Part # 1145260	TERRA 4500SR Part # 1145270
CONTENTS	DESCRIPTION	PART NUMBER					
1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 40	Motor Assembly	90-42672	90-42672	90-42675	90-42675	90-42678	90-42678
1, 8, 13, 29, 32, 34, 35, 38, 40, 42, 43, 44, 45	Small Parts Kit	90-42693	90-42693	90-42693	90-42693	90-42693	90-42693
N/A	Circuit Breaker (Not Shown)	87-14541	87-14541	87-14541	87-14541	87-14541	87-14541
N/A	Contactora (Not Shown)	90-42681	90-42681	90-42681	90-42681	90-42681	90-42681
N/A	Handlebar Switch (Not Shown)	90-42687	90-42687	90-42687	90-42687	90-42687	90-42687
N/A	Fairlead, Hawse (Not Shown)	87-42619	87-42619	87-42619	87-42619	87-42620	87-42620
N/A	Fairlead, Roller (Not Shown)	87-41340-01	87-41340-01	87-41340-01	87-41340-01	87-41340	87-41340
N/A	Power Cable Kit (Not Shown)	90-42684	90-42684	90-42684	90-42684	90-42684	90-42684
N/A	Remote Control (Not Shown)	2275	2275	2275	2275	2275	2275
N/A	Rope, Synthetic (Not Shown)	87-42613	87-42613	87-42613	87-42613	87-42614	87-42614
N/A	Rope, Steel Cable Wire (Not Shown)	87-42611	87-42611	87-42611	87-42611	87-42612	87-42612
N/A	Socket Assembly (Not Shown)	90-42690	90-42690	90-42690	90-42690	90-42690	90-42690

\*Service parts shown apply to the new generation Terra Winches only. DOES NOT apply to old Terra part numbers (1125220, 1125230, 1135220, 1135230, 1145220, and 1145230).

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	1125260-1-1-20	O-Ring, Motor	2
2	1125260-1-1-25 (Terra 2500/2500SR/3500/3500SR) 1145240-1-1-25 (Terra 4500/4500SR)	Spring, Brake UTV	1
3	1125260-1-1-27 (Terra 2500/2500SR/3500/3500SR) 1145240-1-1-27 (Terra 4500/4500SR)	Adapter, Driveshaft-Brake	1
4	1145240-1-1-9	Motor Contact Housing	1
5	1125260-1-1-26 (Terra 2500/2500SR/3500/3500SR) 1145240-1-1-26 (Terra 4500/4500SR)	Adapter, Motor-Brake	1
6	1145240-1-1-17	Nut, Serrated Flange M6	4
7	1125260-11-6	Washer, Flat M6	4
8	1125260-1-1-29	O-Ring, 8mm O.D.	4
9	1125260-1-1-13	Motor Cap	1
10	1125260-1-1-5	Stator - Permanent Magnet	1
11	1125260-1-1-1 (Terra 2500/2500SR/3500/3500SR) 1145260-1-1-1 (Terra 4500/4500SR)	Drum Support - Motor End UTV	1
12	1125260-1-1-6 (Terra 2500/2500SR) 1135260-1-1-6 (Terra 3500/3500SR) 1145260-1-1-6 (Terra 4500/4500SR)	Rotor, UTV	1
13	1145240-1-1-7	Ball Bearing, 32mm O.D.	1
14	1145240-1-1-15	Retainer, Terminal Screw	2
15	1145240-1-1-16	Screw, Square Head M6	2
16	1125260-1-1-14	Insulator, Blue	1
17	1125260-1-1-28	Insulator, Yellow	1
18	1125260-1-1-18	Screw, Cap Head M5-0.8 x 125mm	2
19	1125260-11-5	Washer, Flat M5	2
20	1125260-1-3-3	Gearbox Plate	1
21	1125260-1-3-97	Clutch Mechanism	1
22	1125260-1-3-96	Clutch Handle	1
23	1125260-1-3-5	Ring Gear, 3rd Stage UTV	1
24	1125260-1-3-6 (Terra 2500/2500SR) 1135260-1-3-6 (Terra 3500/3500SR/4500/4500SR)	1st Stage Planetary Assembly	1
25	1125260-1-3-8 (Terra 2500/2500SR) 1135260-1-3-8 (Terra 3500/3500SR/4500/4500SR)	2nd Stage Planetary Assembly	1
26	1125260-1-3-4	Screw, Cap Head M5-0.8 x 14mm	2
27	1125260-1-3-9	3rd Stage Planetary Assembly	1
28	1125260-1-4-1 (Terra 2500/2500SR /3500/3500SR) 1145260-1-4-1 (Terra 4500/4500SR)	Drive Shaft	1
29	1125260-1-4-6	Spring, Clutch	1
30	1125260-1-4-4	Retaining Washer	3
31	1125260-1-4-3	Gear, Drum Hub	1
32	1125260-1-5 (Terra 2500/2500SR/3500/3500SR) 1145260-1-5 (Terra 4500/4500SR)	Tie Bar	2
33	1125260-1-8 (Terra 2500/3500) 1125270-1-8 (Terra 2500SR/3500SR) 1145260-1-8 (Terra 4500) 1125270-1-8 (Terra 4500SR)	Drum, Narrow Steel (Terra 2500/3500) Drum, Narrow Synthetic (Terra 2500SR/3500SR) Drum, Standard Steel (Terra 4500) Drum, Standard Synthetic (Terra 4500SR)	1
34	1145240-1-1-2	Drum Bearing	2
35	1145240-1-1-3	Drum Gasket	2
36	1125260-1-6	Screw, Cap Head M5-0.8 x 20mm	2
37	1125260-1-7	Screw, Cap Head M5-0.8 x 25mm	2
38	1125260-1-3-2	Face Seal, UTV	1
39	1125260-1-3-1	Gearbox/Drum Support	1
40	1125260-1-1-24	Snap Ring, 34mm ID Groove	1
41	1125260-1-9	Set Screw M6	1
42	90-42693-11	O-Ring, Clutch	1
43	1125260-1-3-95	Thrust Bearing, 3rd Stage	1
44	1125260-1-3-85 (Terra 2500/2500SR) 1135260-1-3-85 (Terra 3500/3500SR/4500/4500SR)	Thrust Bearing, 2nd Stage	1
45	1125260-1-3-65 (Terra 2500/2500SR) 1135260-1-3-65 (Terra 3500/3500SR/4500/4500SR)	Thrust Bearing, 1st Stage	1

Terra 2500/2500SR/3500/3500SR/4500/4500SR

