




# INSTALLATION INSTRUCTIONS

APPLICATION: 1997-01 DODGE DAKOTA  
1998-01 DODGE DURANGO

## AUTOMOTIVE PRODUCTS, INC.

PUSH BAR  
ASSEMBLY

**36-1850**  
**36-1860**

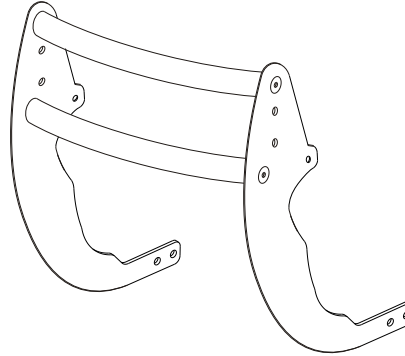

PARTS KIT CONTENTS		TOOLS REQUIRED	
QTY	DESCRIPTION		
1	UPRIGHT, PASSENGER	RATCHET TORQUE WRENCH 9/16" SOCKET 3/4" SOCKET 18MM SOCKET 3/4" COMBINATION WRENCH 9/16" COMBINATION WRENCH 19MM SOCKET	
1	UPRIGHT, DRIVER		
1	TOP TUBE		
1	BOTTOM TUBE		
1	TOP MOUNT BRACKET, PASSENGER		
1	TOP MOUNT BRACKET, DRIVER		
2	BOTTOM MOUNT BRACKET		
2	LIGHT MOUNT		
4	1/2-13 X 1.50" FLAT HEAD BOLT SS		
4	M12-1.75 X 40MM HEX HEAD BOLT		
4	1/2-13 X 1.50" HEX HEAD BOLT		
4	1/2-13 NYLON INSERT LOCK NUT		
2	3/8-16 X 1.25" HEX HEAD BOLT		
2	3/8-16 X NYLON INSERT LOCK NUT		
24	1/2" FLAT WASHER		
4	3/8" FLAT WASHER		
2	3/8-16 X 1.00" SELF THREADING BOLT		
2	5/8" DIAMETER NYLON WASHER		
4	3" DIAMETER PUSH BAR GASKET		
6	1/2-13 X 1.25" HEX HEAD BOLT		
6	1/2" LOCK WASHER		
6	1/2-13 HEX NUT		
<b>NOTE:</b> SOME FASTENERS WILL BE LEFT OVER AFTER INSTALLATION IS COMPLETE.			

- STEP 1. Remove the contents from the box and check for any damage. Verify all parts against the parts list.
- STEP 2. Read and understand instructions completely before beginning installation.
- STEP 3. Determine Passenger and Driver Side Uprights, Top and Bottom Tubes. (Uprights are positioned so raised side of bolt holes are facing each other). The tube with the two pierced holes is the Bottom Tube.
- STEP 4. Fasten Upright to Top and Bottom Tubes using (4) 1/2-13 x 1.50" Flathead Bolts and (4) 3.00" Push Bar Gaskets. Hand tighten.
- STEP 5. Fasten Light Mounts to Bottom Tube using (2) 5/8" OD Nylon Washers and (2) 3/8-16 x 1.00" Self Threading Bolts. Tighten and torque to 20 FT. LBS.

