



INSTALLATION INSTRUCTIONS

APPLICATION: 2001-UP KIA SPORTAGE

AUTOMOTIVE PRODUCTS, INC.

<p>SAFARI BAR ASSEMBLY</p> <p>30-0000 30-0005</p> <p>MOUNT KIT:</p> <p>30-1215</p>	
---	--

QTY	PARTS KIT CONTENTS DESCRIPTION	TOOLS REQUIRED
1	SAFARI BAR ASSEMBLY (PURCHASED SEPARATELY)	3/4" SOCKET 12MM SOCKET 21MM SOCKET - DEEP WELL RATCHET TORQUE WRENCH NOTE: FASTENERS ARE CONTAINED IN BOLT KIT 60-1236.
1	MOUNT BRACKET - PASSENGER SIDE	
1	MOUNT BRACKET - DRIVER SIDE	
2	1/2-13 X 2.00" HEX HEAD BOLT	
2	1/2" FLAT WASHER	
2	1/2" LOCK WASHER	
2	M14 FLAT WASHER	

- STEP 1. Remove the contents from the box and check for any damage. Verify all parts against the parts list.
- STEP 2. Read and understand instructions completely before beginning installation.
- STEP 3. Determine Driver and Passenger Mount Brackets from figure above.
- STEP 4. Locate and remove (4) M14 body mount nuts and (2) lower M8 nuts from the front body mount and bumper brace.
- STEP 5. Secure mount brackets inside the body mount pockets using the (4) existing 14mm nuts with (2) 1/2" flat washers and the existing M8 bolts. SEE FIGURE 1. Hand tighten.
- STEP 6. Mount Safari Bar using 1/2" fasteners. Hand tighten.
- STEP 7. Center and level Safari Bar. Tighten and torque fasteners as follows:
- M14 fasteners to 97 FT. LBS
 - M8 fasteners to 26 FT. LBS
 - 1/2" fasteners to 65 FT. LBS.

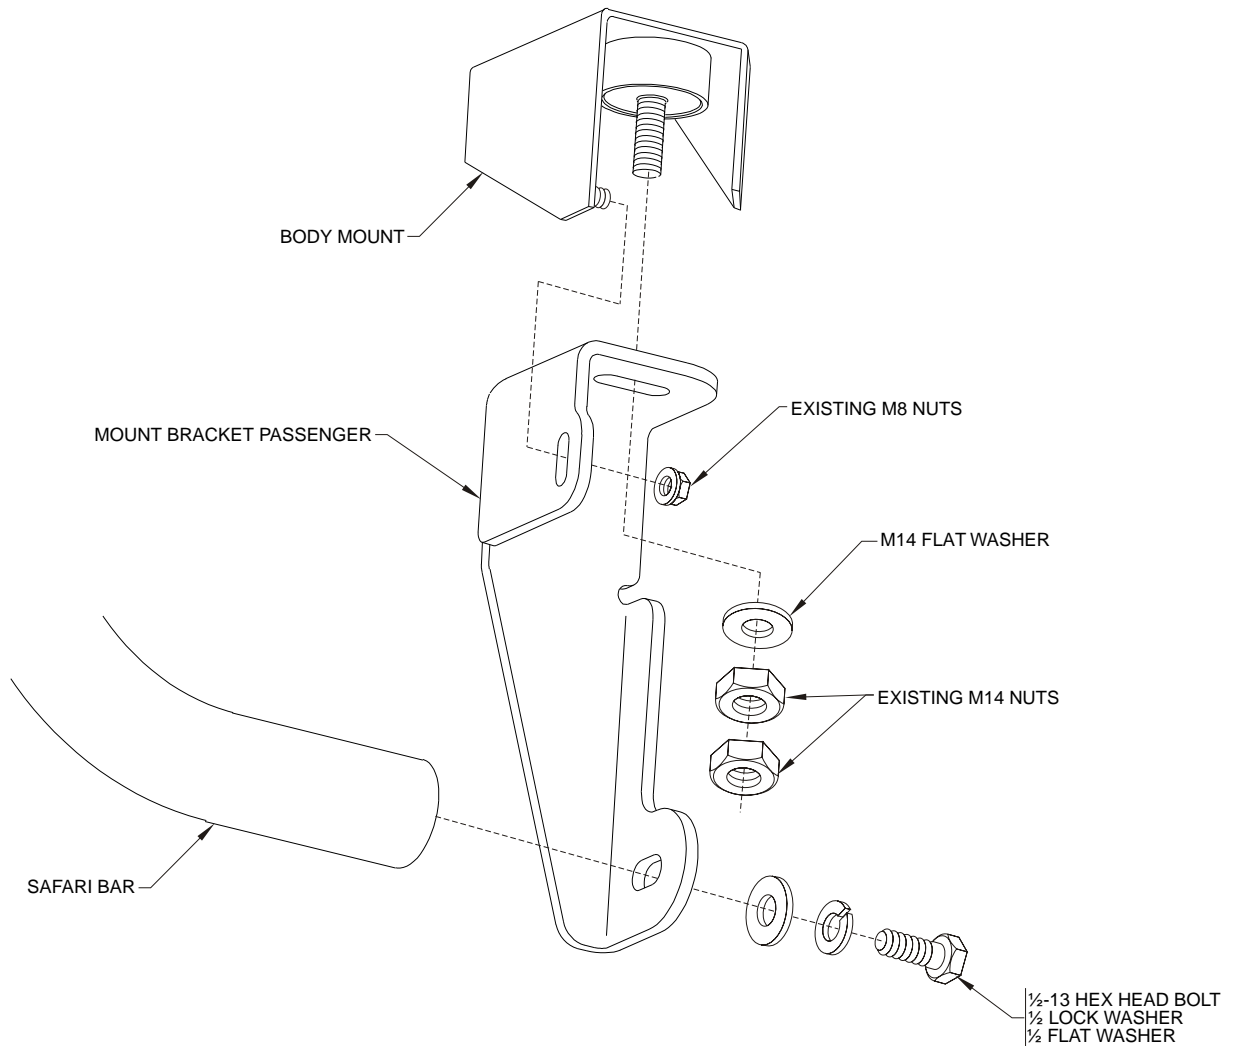


FIGURE 1
PASSENGER SIDE SHOWN - DRIVER SIDE OPPOSITE

Finish protection - Westin products have a high quality finish that must be cared for like any other exposed finish on the vehicle. Protect the finish with a non-abrasive automotive wax (pure carnauba, for example) on a regular basis. The use of cleaner wax or any compound which contains an abrasive is detrimental, as the compounds scratch the finish and open it to corrosion.



Westin Automotive Products, Inc.
 5200 N. Irwindale Ave. Suite 220
 Irwindale, Ca. 91706

Thank You for choosing Westin products
 For additional installation assistance please call
 Customer service (800) 793-7846 or (507)-375-3559