




INSTALLATION INSTRUCTIONS

APPLICATION: 1999-00 CHEVY SILVERADO PICKUP
1999-00 GMC SIERRA PICKUP

AUTOMOTIVE PRODUCTS, INC.

SPORTSMAN TAIL LIGHT GUARD	QTY	PART KIT CONTENTS DESCRIPTION
CHROME BLACK 39-3030 39-3035	1	TAIL LIGHT GUARD - DRIVER
	1	TAIL LIGHT GUARD - PASSENGER
	2	PLASTIC RETAINER CLIPS

- STEP 1. Remove the contents from box and check for damage. Verify all parts are present. Read instructions completely before beginning.
- STEP 2. Snap plastic retainer clips onto third wire from top of both tail light guards.
- STEP 3. Open tailgate to gain access to tailgate jamb. Carefully remove two existing (one upper and one lower) taillight attachment screws, but do not discard as they will be re-installed. Center taillight guard over taillight and adjust bracket so retainer clip rests snugly against lens.
- STEP 4. Secure taillight guard to vehicle re-using factory screws previously removed. Tighten snugly using caution to avoid cracking housing assembly. Carefully close tailgate making sure taillight guard does not interfere with operation of tailgate opening and closing. Remove backing tape from base of retainer clips and press firmly against taillight lens.
- STEP 5. Repeat installation for opposite side.

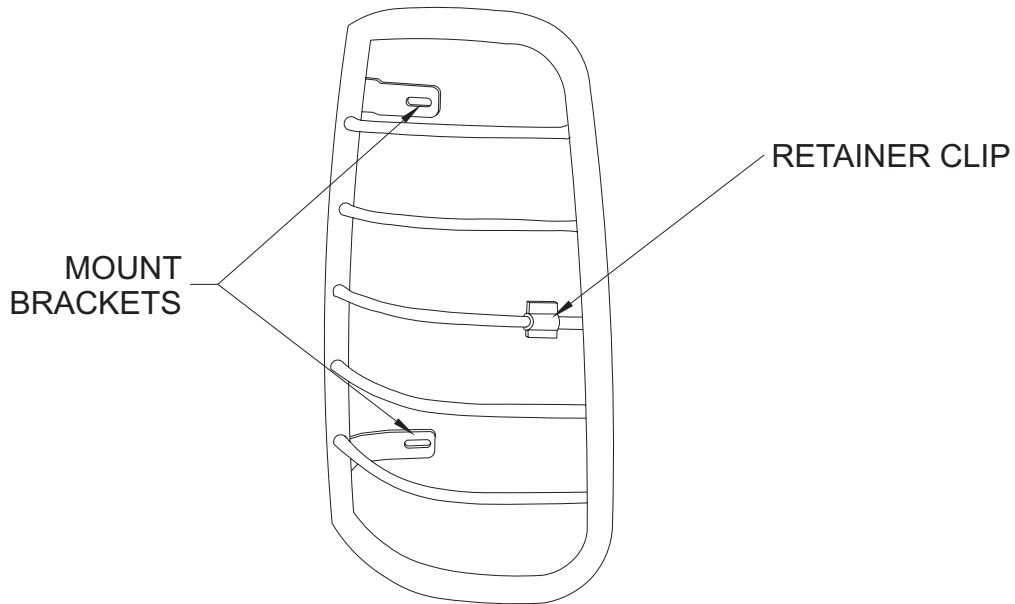

Finish protection - Westin products have a high quality finish that must be cared for like any other exposed finish on the vehicle. Protect the finish with a non-abrasive automotive wax (pure carnauba, for example) on a regular basis. The use of cleaner wax or any compound which contains an abrasive is detrimental, as the compounds scratch the finish and open it to corrosion.



Westin Automotive Products, Inc.
5200 N. Irwindale Ave. Suite 220
Irwindale, Ca. 91706

Thank You for choosing Westin products
For additional installation assistance please call
Customer service (800) 793-7846 or (507) 375-3559