



INSTRUCTIONS—INSTRUCCIONES—CONSIGNES

APPLICATION: 2011-UP CHEVY SILVERADO/GMC SIERRA 2500/3500 HD
APP PART # 37-03610/37-03615
OFF ROAD LIGHT BAR

AUTOMOTIVE PRODUCTS, INC.

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	LIGHT BAR	18MM SOCKET
2,3	2	MOUNTING BRACKETS (2) DRIVERS SIDE, (3) PASSENGER SIDE	18MM WRENCH
4	4	M12 HEX HEAD BOLTS	16MM WRENCH
5	8	M12 FLAT WASHERS	16MM SOCKET
6	4	M12 LOCK WASHERS	RATCHET
7	4	M12 HEX NUTS	TORQUE WRENCH
8	4	M10 HEX HEAD BOLTS	
9	8	M10 FLAT WASHERS	
10	4	M10 LOCK WASHERS	
11	4	M10 HEX NUTS	

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

1. Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.
2. Starting from the front of the vehicle, remove the tow hooks using an 18mm socket and 18mm wrench.
3. Install the driver side mounting bracket to the tow hook mounting locations using (2) M12 hex head bolts, (4) M12 flat washers, (2) M12 split lock washers and (2) M12 hex nuts (FIG 1). Do not tighten fully at this time.
4. Repeat step 3 for the passenger side.
5. Install the light bars to the mounting brackets using (2) M10 hex head bolts, (4) M10 flat washers, (2) M10 split lock washers and (2) M10 hex nuts (FIG 1). Do not tighten fully at this time.
6. Align and adjust the step bar as needed then fully tighten all hardware at this time. Torque all M12 hardware to 45-50 ft lbs, and M10 to 30-35 ft lbs

CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER



Westing Automotive Products, Inc.
5200 N. Irwindale Ave. Suite 220
Irwindale, Ca. 91706


XX/XX/XX

P.N.: 75-0082-RevA

ECO #: W11-0054

PG-1

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westingautomotive.com

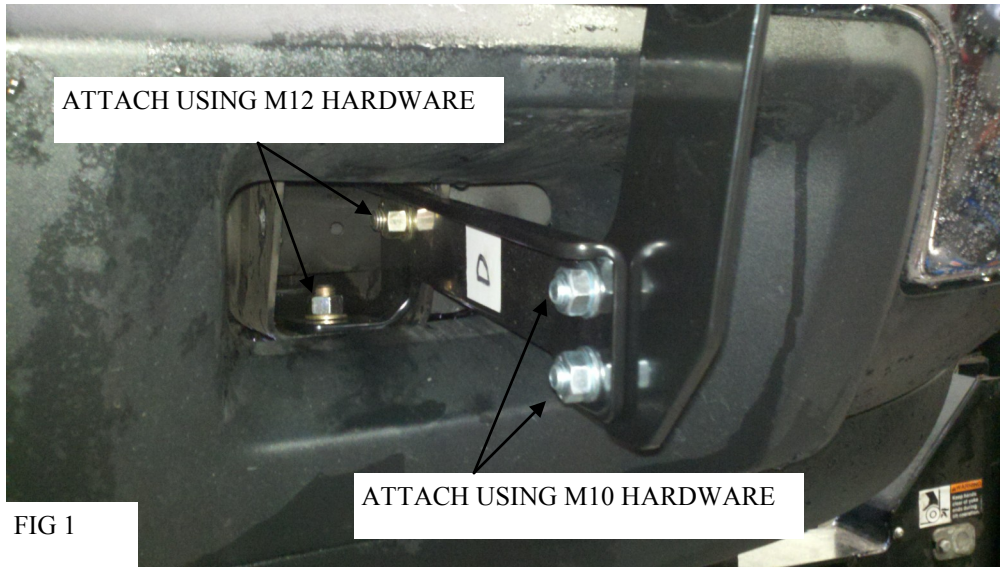

Westing Automotive Products, Inc.
5200 N. Irwindale Ave. Suite 220
Irwindale, Ca. 91706

XX/XX/XX

P.N.: 75-0082-RevA

ECO #: W11-0054

PG-2

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com