



INSTRUCTIONS—INSTRUCCIONES—CONSIGNES

APPLICATION: 2011 FORD SUPERDUTY F250/350/450

APP PART # 37-02370, 37-02375

LIGHT BAR



AUTOMOTIVE PRODUCTS, INC.

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	LIGHT BAR	RATCHET
			TORQUE WRENCH

1. Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.
2. Locate the (4) outer factory bumper mounting bolts and remove them, when removing hardware there will be a metal retaining washer that must be removed, (this will not be reused). Fig 1
3. Once removed take the light bar and align it to the bumper bolt holes. Attach the light bar to the vehicle using the factory hardware. Do not fully tighten at this time. Fig 2
4. Align and adjust the light bar as needed, then tighten all hardware at this time. Torque the factory bumper bolts to factory specs.

CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER

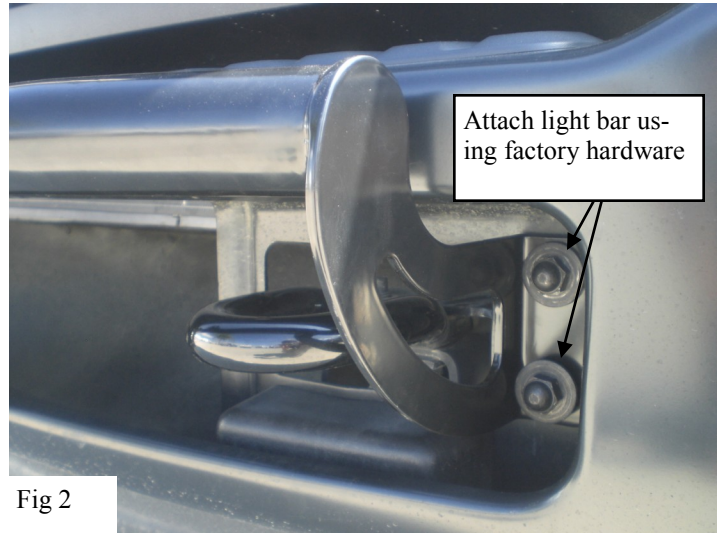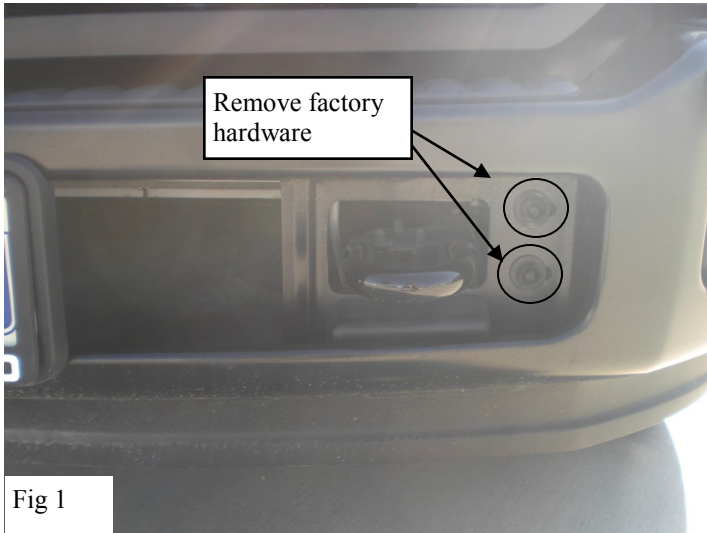

Westing Automotive Products, Inc.
5200 N. Irwindale Ave. Suite 220
Irwindale, Ca. 91706

9/8/2011 P.N.: 75-0113-RevA W11-0024

PG-1

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com



Installation complete



Westing Automotive Products, Inc.
5200 N. Irwindale Ave. Suite 220
Irwindale, Ca. 91706

9/8/2011 P.N.: 75-0113-RevA W11-0024

PG-2

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com