

INSTALLATION INSTRUCTIONS

EXP TRUCK CAP REAR WINDOW PROTECTOR



APPLICATION:

2015-2025 Ford F-150 5' 5"/6' 5" Bed, 2019-2025 Ram 1500 5' 7"/6' 4" Bed, 2020-2025 Ram 2500/3500 6' 4" Bed, 2020-2025 Jeep Gladiator 5' 4" Bed, 2019-2025 Chevrolet Silverado/Sierra 1500 5' 8" Bed, 2024-2025 Toyota Tacoma 5' 2"/6' Bed, 2007-2021 Toyota Tundra 5' 5" Bed, 2022-2025 Toyota Tundra 5' 5" Bed


PART NUMBER:

16-10032, 16-10033, 16-10036, 16-10038, 16-10037

CONTENT

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	REAR MESH	PHILLIPS SCREWDRIVER
2	4	M6 PHILLIPS SCREW	
3	4	RUBBER STRIP	

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

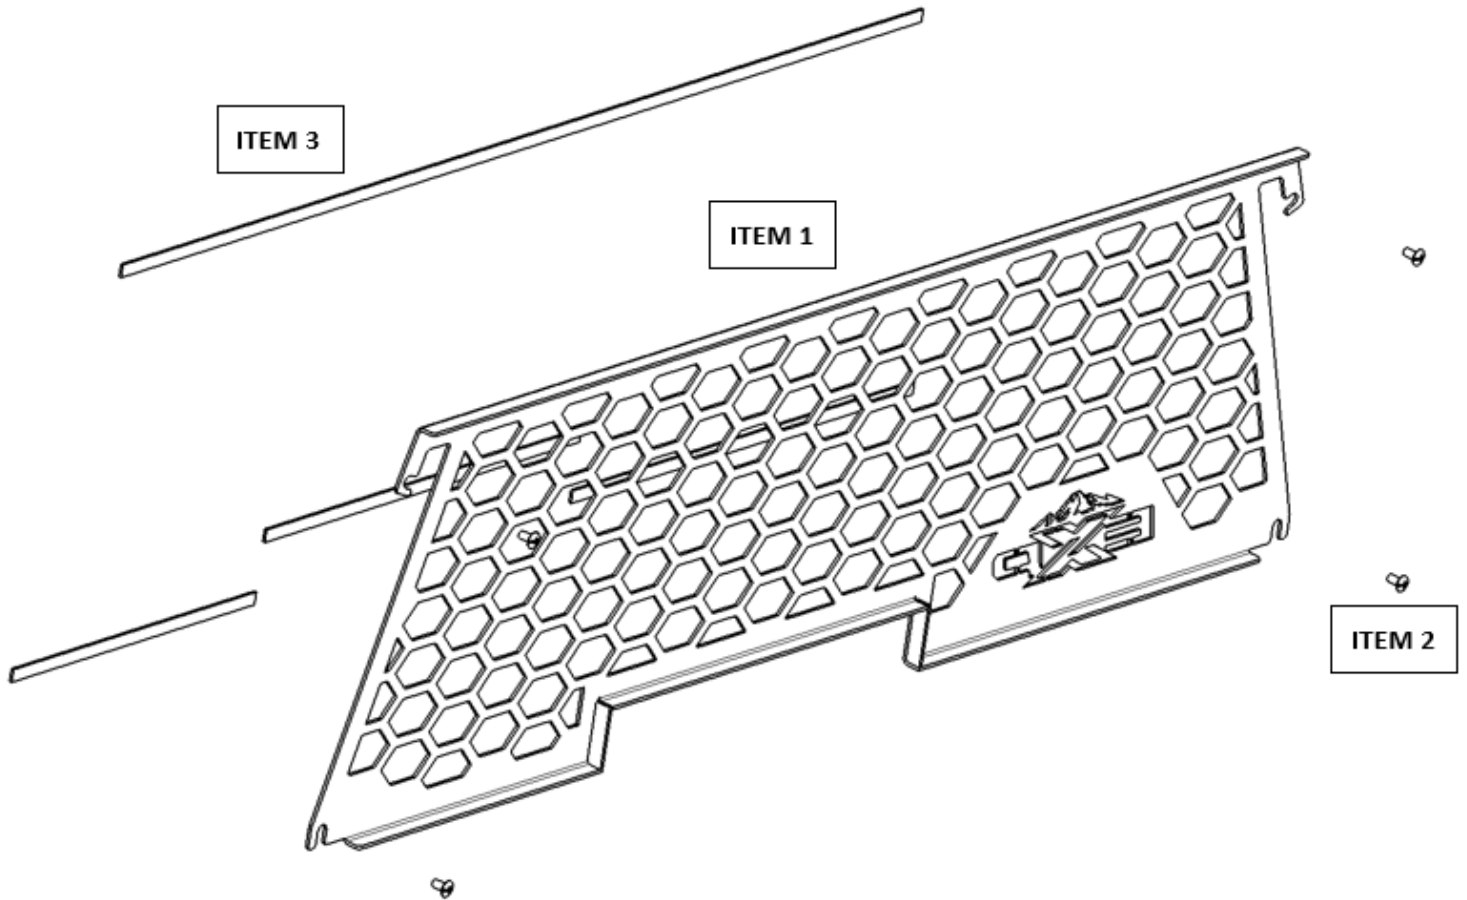

Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773



Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846

www.westinautomotive.com

DATE: 07/10/2025

PROCEDURE


1. Remove contents from box, verify if all parts listed are present and free from damage.
Carefully read and understand all instructions before attempting installation.
Failure to identify damage before installation could lead to a rejection of any claim.
2. Take off the (4) original Phillips screws that are located on the rear window of the truck cap. See **Figures 1-3** as reference.

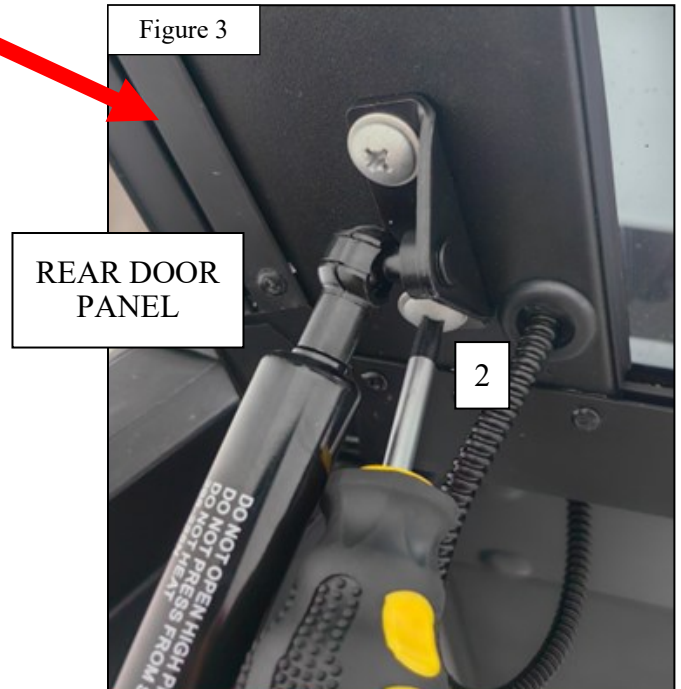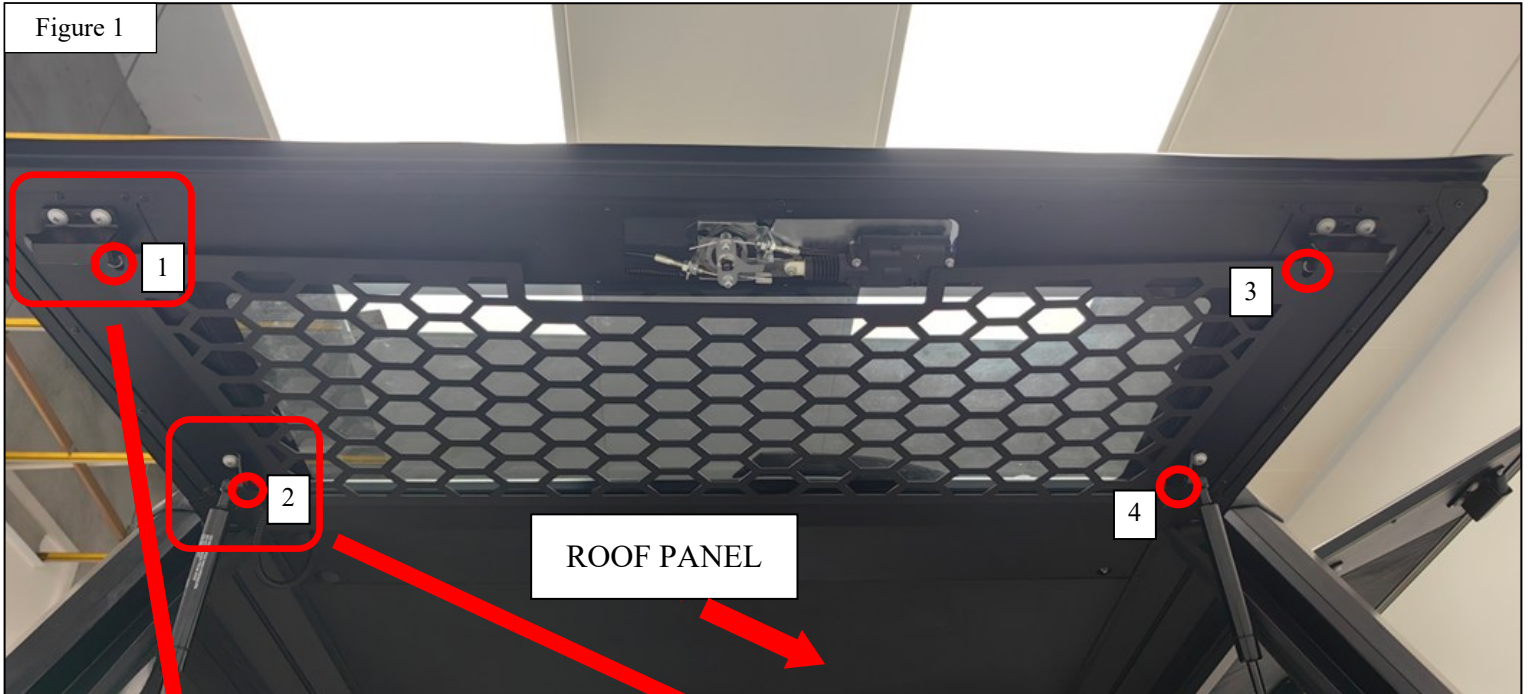

WESTIN

Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

3. Stick the (4) Rubber Strips (Item 3) onto the back of the Rear Mesh (Item 1) (**Fig 4**).
4. Attach the mesh to the rear window with the provided (4) M6 Phillip Screws (Item 2) (**Fig 5**).

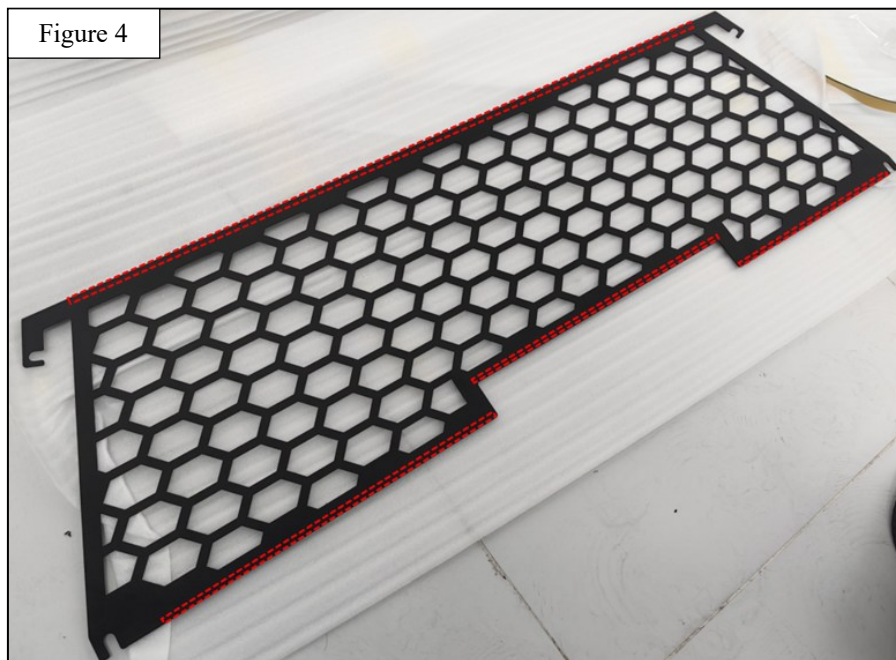

Adjust the Rear Door Mesh Protector to the appropriate position. Tighten all bolts M6 hardware to 5-7 ft-lbs and all M8 hardware to 15-18 ft-lbs.

The installation of your EXP Truck Cap Rear Door Mesh Protector is complete!



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to www.p65warnings.ca.gov



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773