



INSTALLATION INSTRUCTIONS

DEFENDER REAR PARTITION POLY WINDOW

APPLICATION:

2011-2019 POLICE INTERCEPTOR UTILITY


PART NUMBER:

35-120052

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	POLYWINDOW	7/16 SOCKET
2	28	1/4 BUTTON HEAD CAP SCREW (BLACK ZINC)	5/32 ALLEN WRENCH
3	56	1/4 FLAT WASHER (BLACK ZINC)	7/16 OPEN WRENCH
4	28	1/4 INTERNAL TOOTH WASHER (BLACK ZINC)	RATCHET
5	28	1/4 A-CORN NUT (BLACK ZINC)	TORQUE WRENCH


ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

INSTALLATION TIME: 15 MINUTES

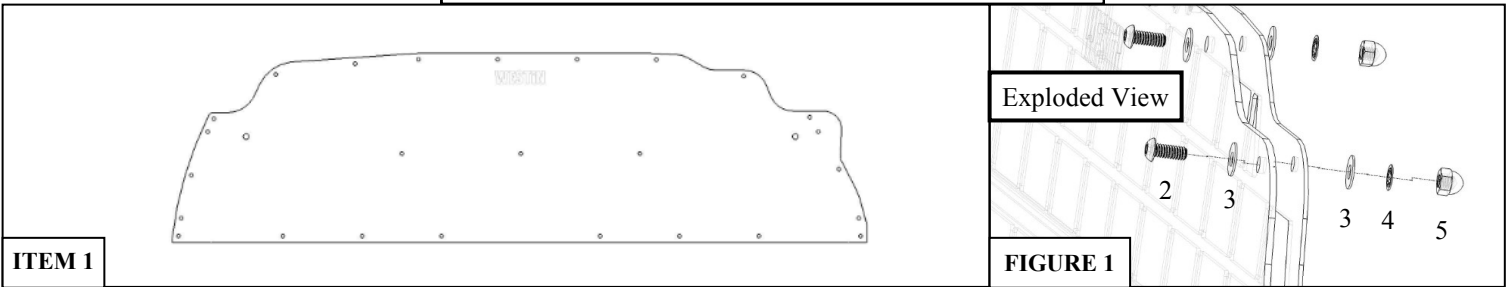

PROCEDURE

1. Remove contents from box, verify if all parts listed are present and free from damage.  
Carefully read and understand all instructions before attempting installation.  
Failure to identify damage before installation could lead to a rejection of any claim.
2. Install the Polywindow (1) in front of the Westin Defender Rear Partition 35-12005 rear guard screen. Figures 1 and 2. By using the provided 1/4" hardware (2, 3, 4, 5). Figure 1.
3. Align and adjust as necessary then tighten hardware, 1/4 hardware to 8 ft-lbs, M10 hardware to 30-35 ft-lbs.

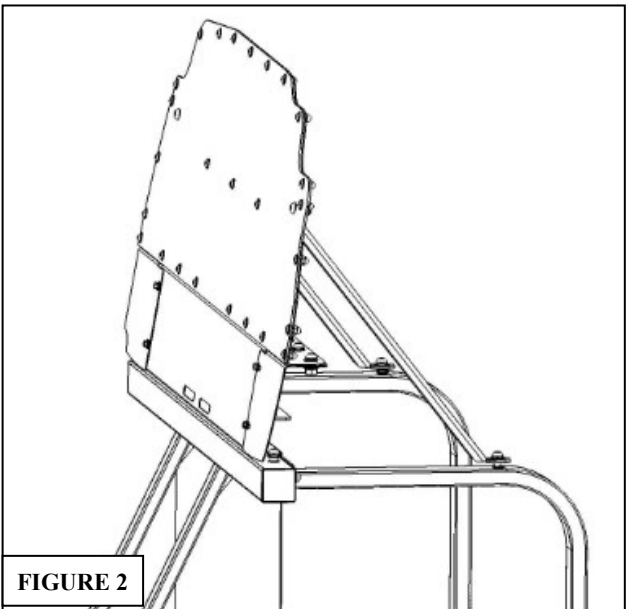

Westin Automotive Products, Inc.  
320 W. Covina Blvd  
San Dimas, Ca. 91773

Thank you for choosing Westin products  
for additional installation assistance please call  
Customer Service (800) 793-7846

[www.westinautomotive.com](http://www.westinautomotive.com)

DATE: 02/07/2019



## WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

### FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

### DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

### EYE PROTECTION:

**ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.**

### MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

### FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov)



Westin Automotive Products, Inc.  
320 W. Covina Blvd  
San Dimas, Ca. 91773