


INSTALLATION INSTRUCTIONS



**DOOR COVER
APPLICATION:
Defender Door Cover Panels
35-15065, 35-15075**


CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	DRIVER SIDE DOOR COVER	3/16 DRILL BIT
2	1	PASSENGER SIDE DOOR COVER	DRILL
3	16	RIVET 3/16" (BLACK)	RIVET GUN

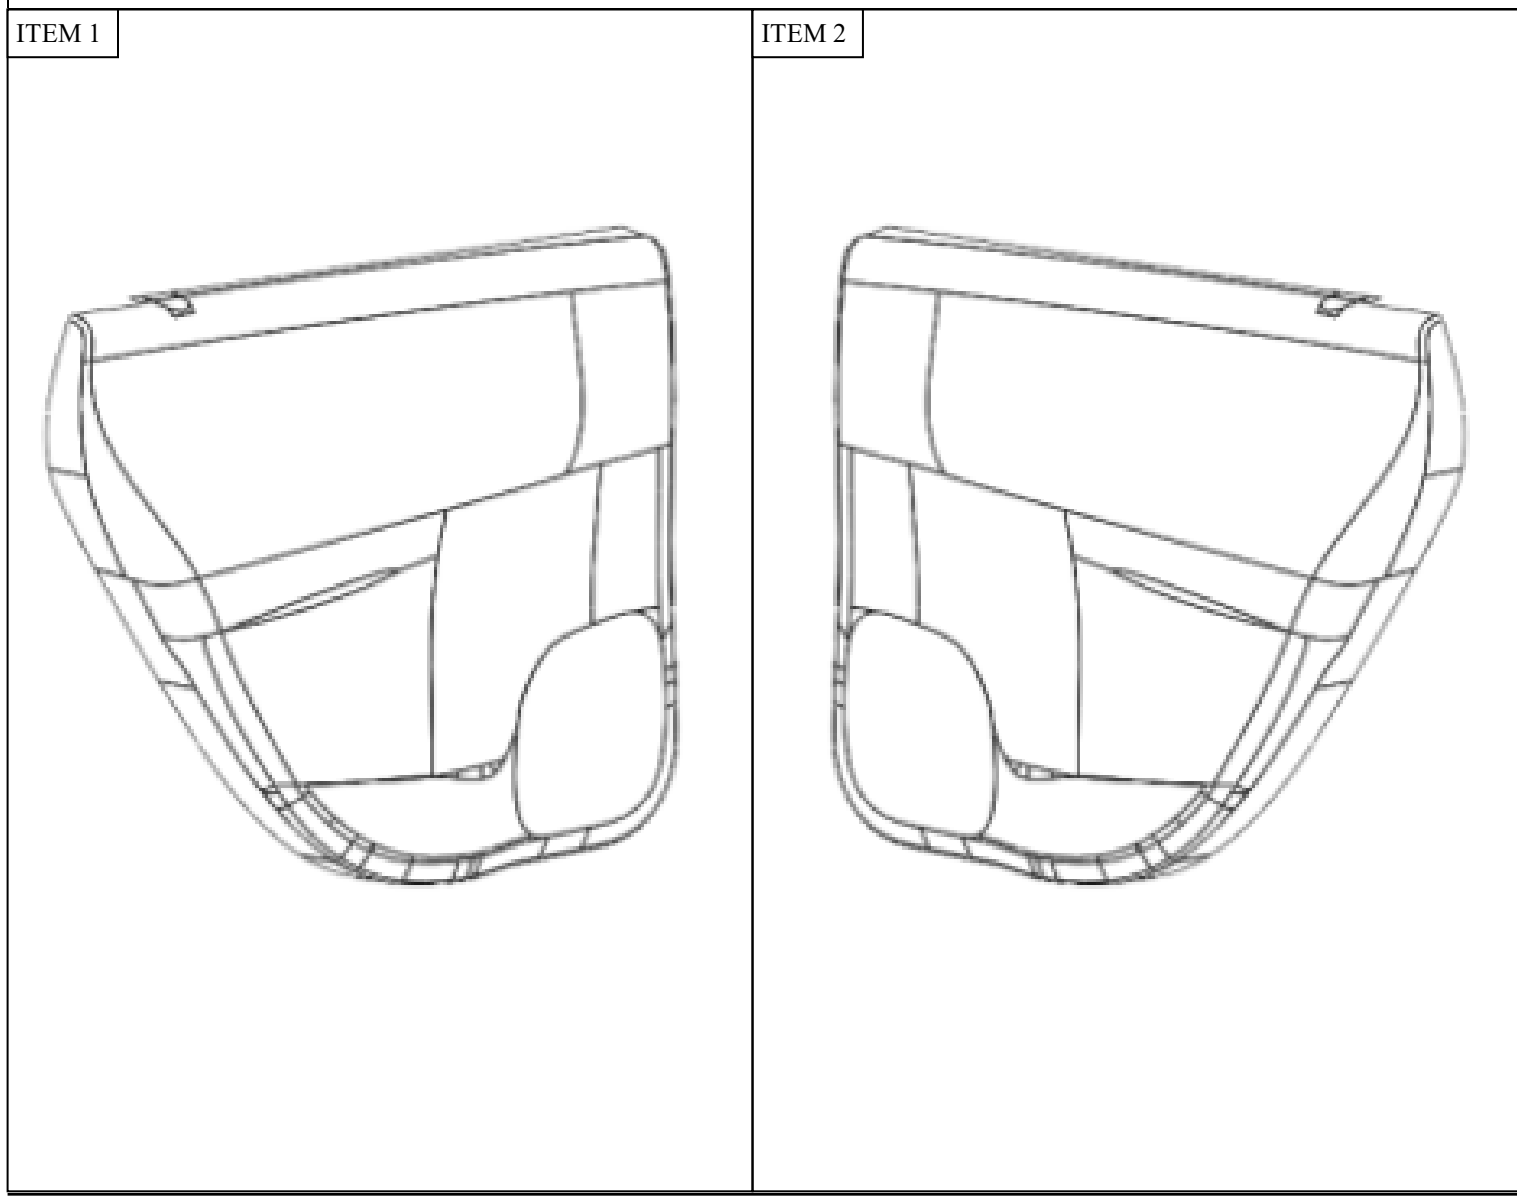

PROCEDURE


1. Remove contents from box, verify if all parts listed are present and free from damage.
Carefully read and understand all instructions before attempting installation.
Failure to identify damage before installation could lead to a rejection of any claim.
2. Place the driver's side door cover over the door panel in a fully seated position. See **Figure 1**.
3. While the door cover is in the correct position, drill eight 3/16 inch holes into the door cover and door panel to allow for riveting. See **Figure 2** as reference.
4. Install the door cover using the provided 3/16 inch rivets.
5. Repeat steps 2-4 for the passenger side of the vehicle.

FIGURE 1

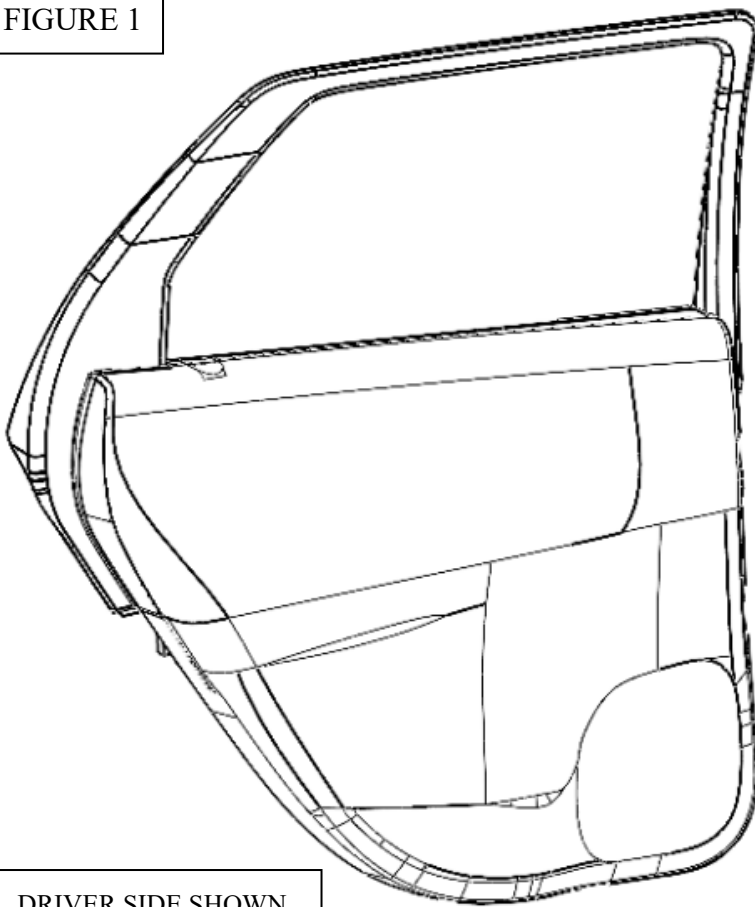

DRIVER SIDE SHOWN

FIGURE 2

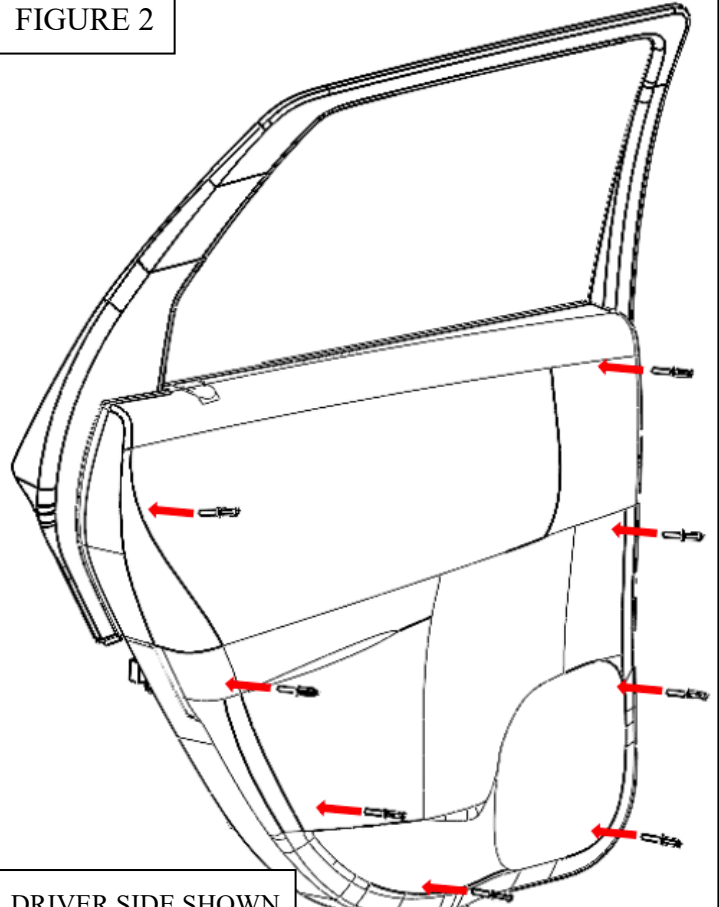


DRIVER SIDE SHOWN



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

INSTALLATION COMPLETE

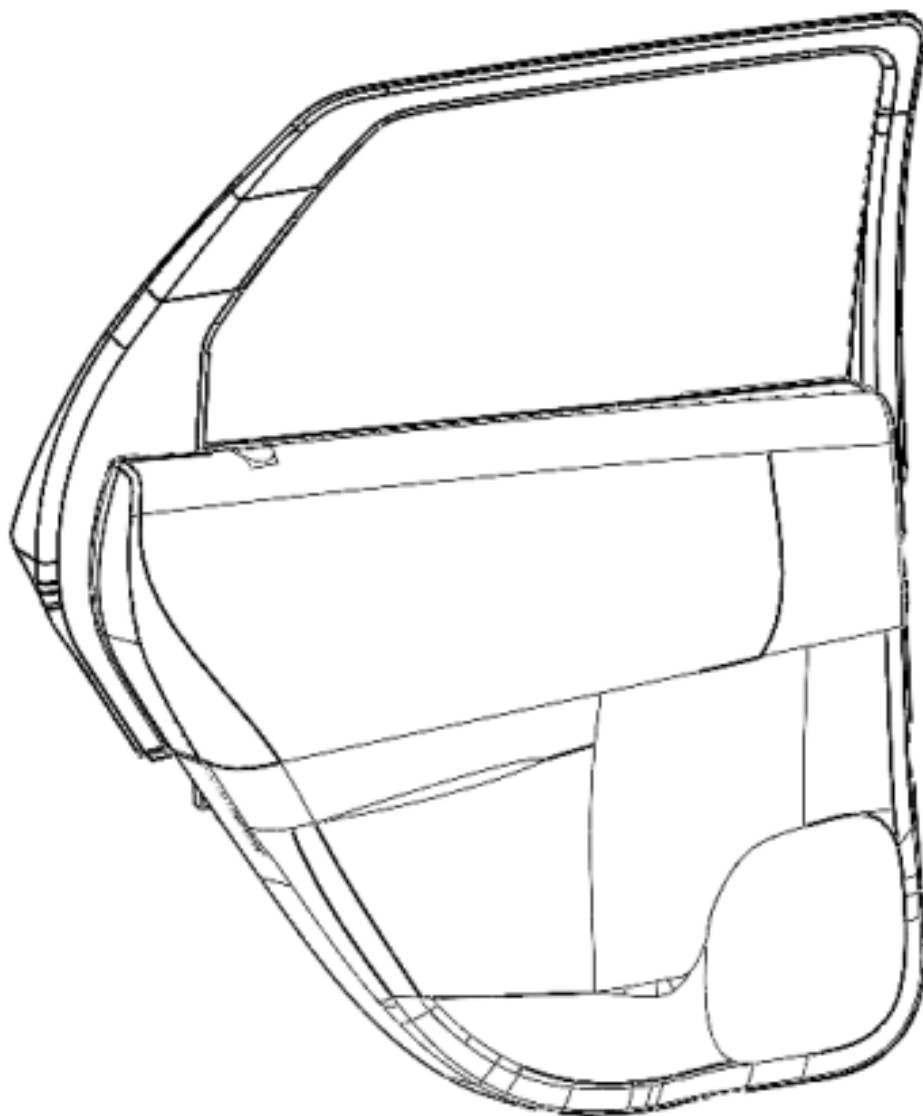

CARE INSTRUCTIONS

- DOOR COVERPANELS SHOULD BE CLEANED WITH MILD SOAP AND WATER. DO NOT USE AMMONIA-BASE CLEANING PRODUCTS.

WESTIN

Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to www.p65warnings.ca.gov



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773