

# INSTALLATION INSTRUCTIONS


## HDX BANDIT REAR BUMPER



**APPLICATION:**  
2015-2019 CHEVROLET/GMC SILVERADO/SIERRA 2500/3500  
**PART NUMBER:**  
58-341155

CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	REAR BUMPER	10MM SOCKET
2	2	BUMPER MOUNTING BRACKET (1 DRIVER, 1 PASSENGER)	10MM WRENCH
3	4	SENSOR L-TAB	19MM SOCKET
4	4	SENSOR HOLE PLUG	19MM WRENCH
5	2	DOUBLE BOLT PLATE	RATCHET
6	2	BACK UP LIGHT	TORQUE WRENCH
7	6	M12 HEX HEAD BOLT	
8	10	M12 SPLIT LOCK WASHER	
9	16	M12 FLAT WASHER	
10	10	M12 HEX NUT	
11	2	M6 SOCKET DRIVE BUTTON HEAD BOLT	
12	2	M6 SERRATED FLANGE NUT	
13	6	M6 FLAT WASHER	
14	4	M6 ROUND HEAD SQUARE NECK BOLT	
15	4	M6 SPLIT LOCK WASHER	
16	4	M6 HEX NUT	
17	6	T-TAP CONNECTOR	

**ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING**

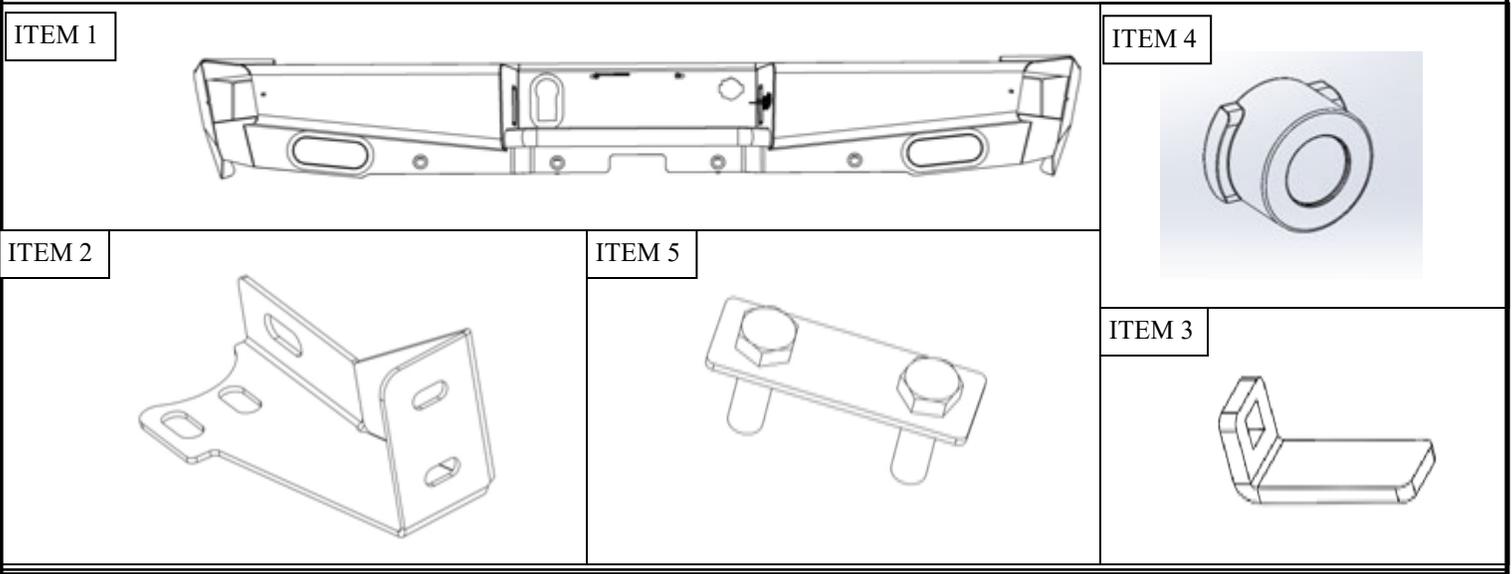





**WESTIN** Westin Automotive Products, Inc.  
320 W. Covina Blvd  
San Dimas, Ca. 91773

Thank you for choosing Westin products  
for additional installation assistance please call  
Customer Service (800) 793-7846  
www.westinautomotive.com



## PROCEDURE

1. Remove contents from box, verify if all parts listed are present and free from damage.  
Carefully read and understand all instructions before attempting installation.  
**Failure to identify damage before installation could lead to a rejection of any claim.**

2. Disconnect license plate lights, trailer connector and park assist sensors so that bumper assembly can be removed.
3. Remove the four bolts indicated in **Figure 1** from the driver's side frame bracket. Repeat on passenger's side.
4. In order to remove the stock bumper, three bolts on each side of the vehicle holding the bed to the frame must be loosened and the bed must be lifted slightly. **Figures 2-4** show the locations of these three bolts on the driver's side. **Note:** Do not remove these bolts. Only loosen them

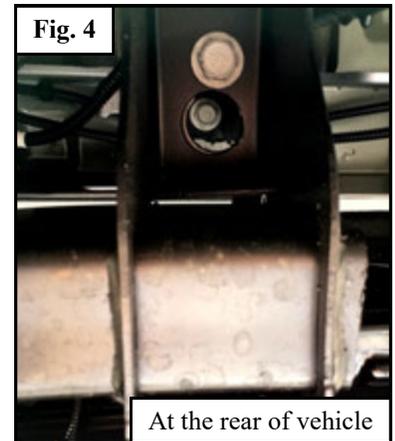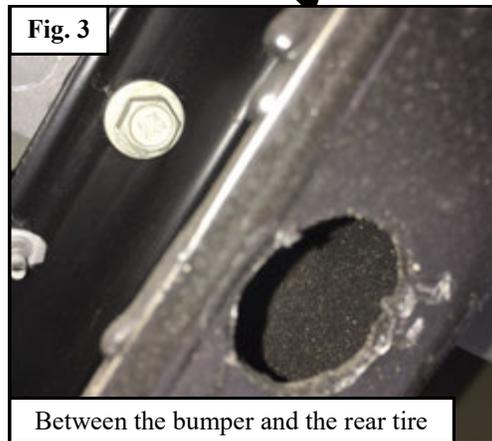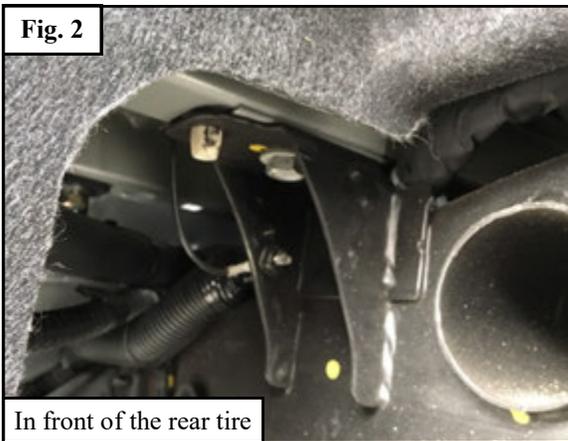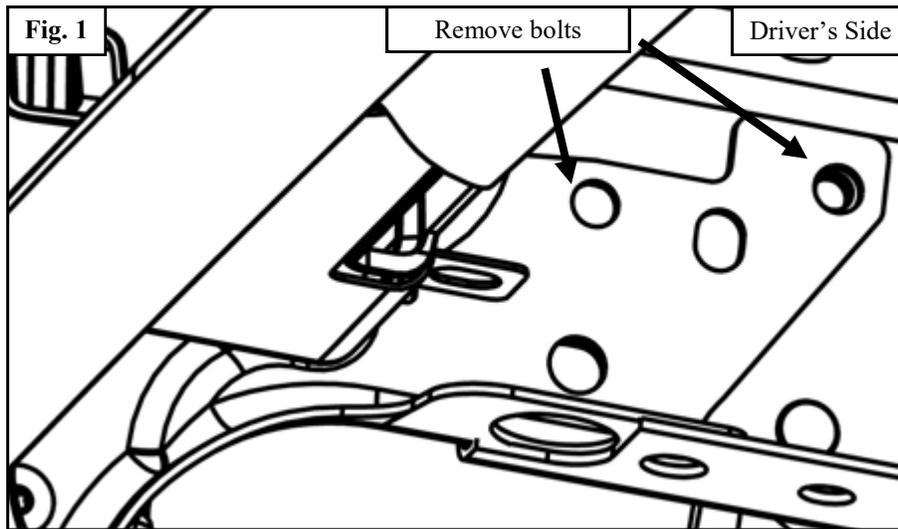


5. **If sensors are equipped:** Install parking sensors by inserting into the holes on bumper and pressing with sensor L-tabs against bumper plate. Fasten L-tabs with the supplied M6 hardware (13-16) . **See Figure 5-7.** Use supplied double sided tape between sensor and L-Tab to keep the sensor from rotating.  
**If sensors are not equipped:** Place the supplied plugs in the sensor holes.
6. Use zip ties to secure sensor in place.  
**Note:** Be sure to maintain the orientation of the sensor so that it remains consistent with its original orientation.
7. Tighten M6 hardware to 5-7 ft-lbs.

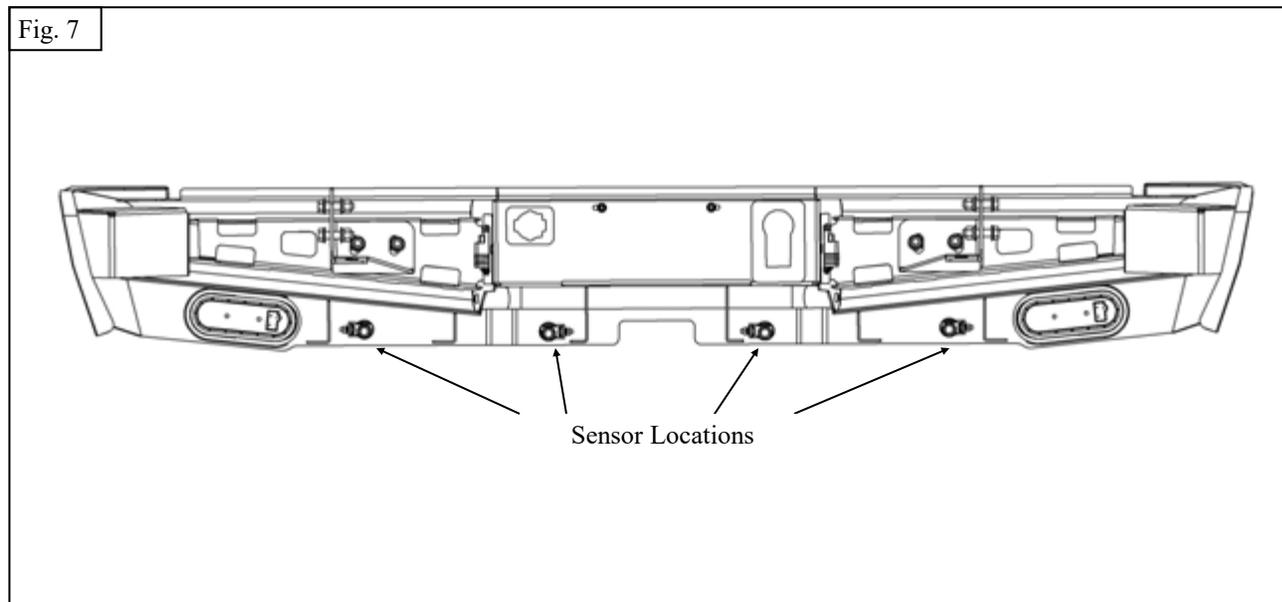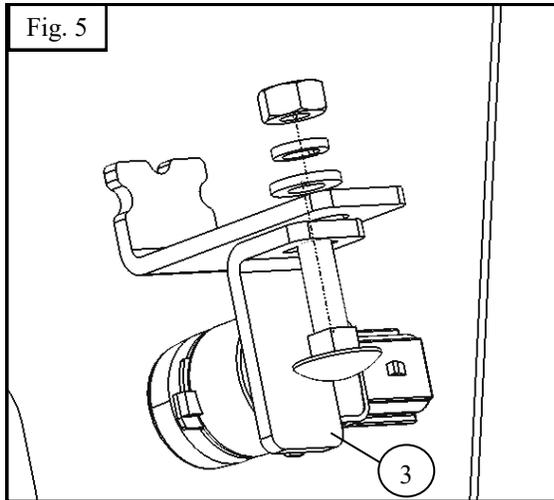


8. Using the supplied M12 hardware, loosely assemble the driver/passenger mounting brackets to the factory tow hitch. See **Figure 8**

Figure 8

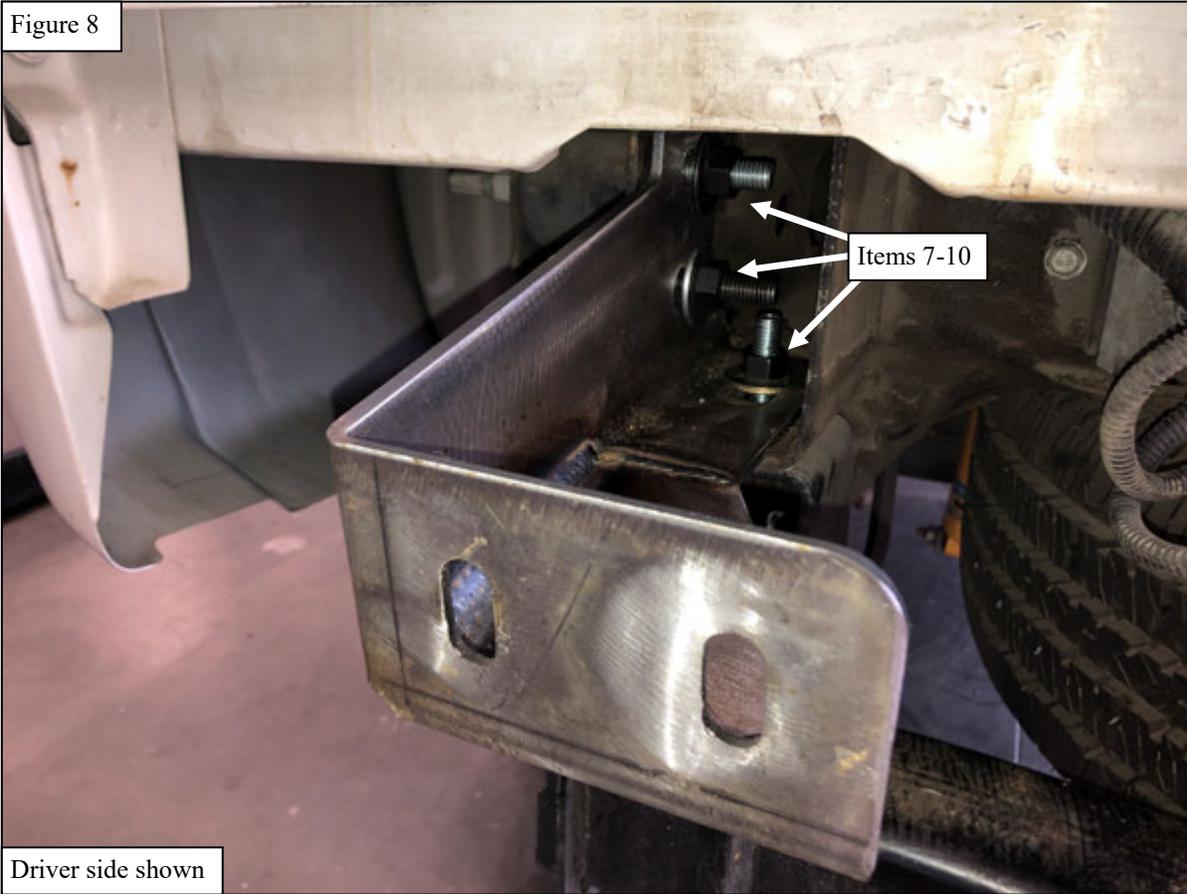


9. Insert the supplied M12 bolt plates into the bumper. See **Figure 9**.

Figure 9

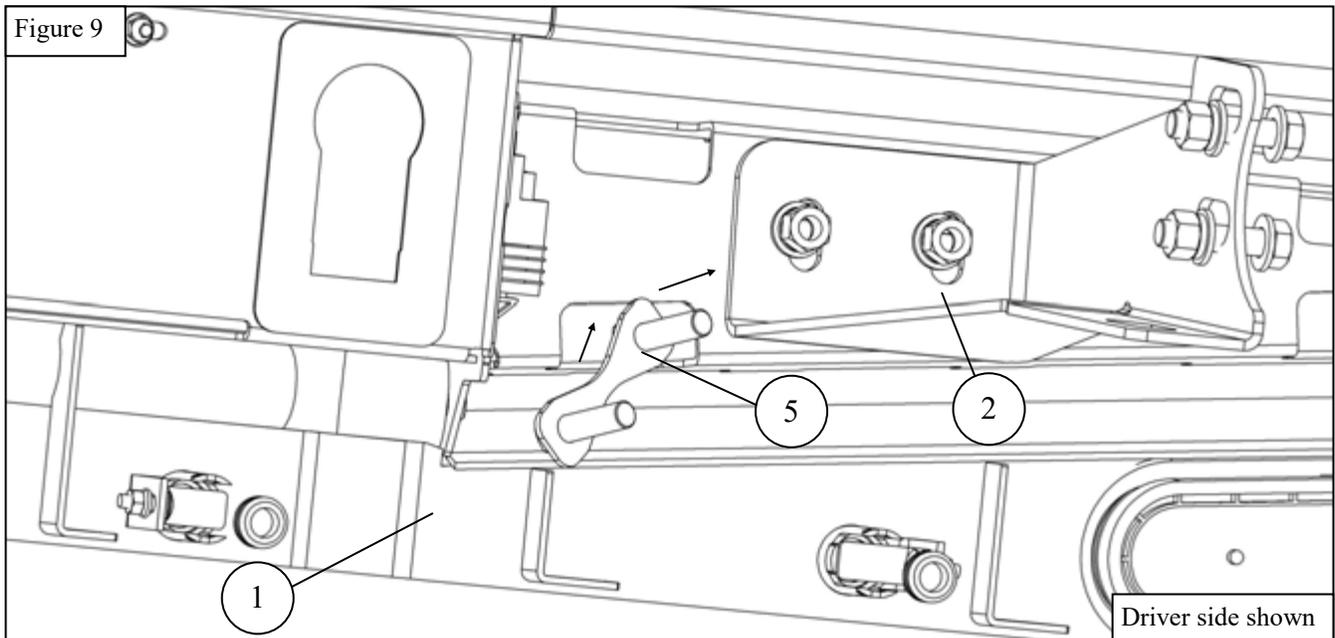

10. With help, loosely assemble the bumper to the mounting brackets. See Figure 10.

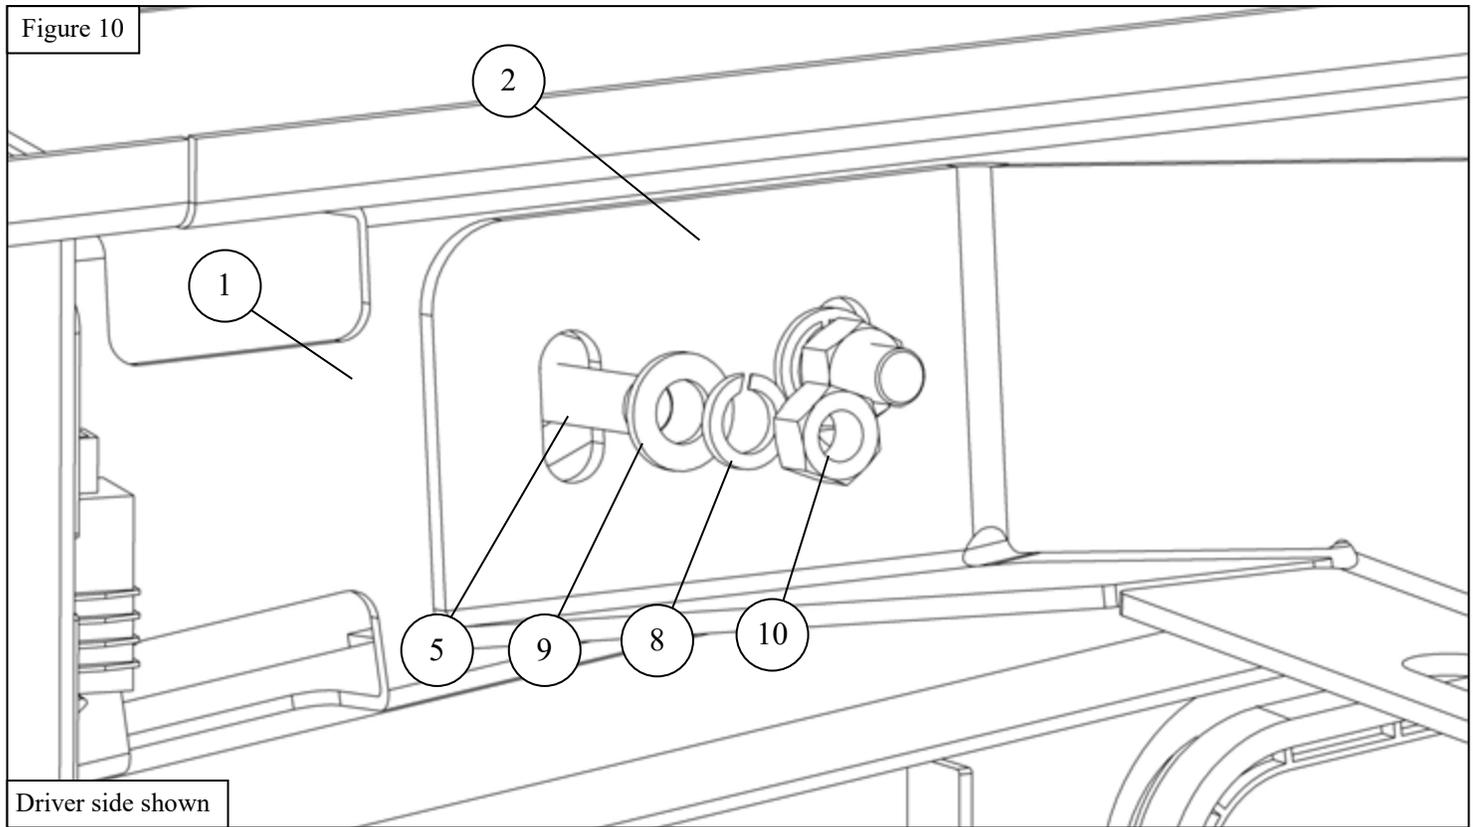


11. Install the Trailer plug and license plate at this time.


**WARNING .**  
After you have mounted bumper on main brackets. CAREFULLY open tailgate. While tailgate is open, adjust the height of the bumper so that it has at least 3/8" of clearance with respect to the tailgate. Torque to 50-55 ft-lbs.

## LIGHT INSTALLATION



1. Disconnect the battery from your vehicle.
2. Locate the license plate lights (pre-installed) in the bumper. Pop out the lights by squeezing the clips in on the backside. **See Figure 11.**
3. Locate the factory wiring for the license plate lights. Strip back the wiring on the factory harness and supplied light. Using connectors, crimp the red wire on the positive factory wire and the black wire to the factory ground wire. **See Figure 12**

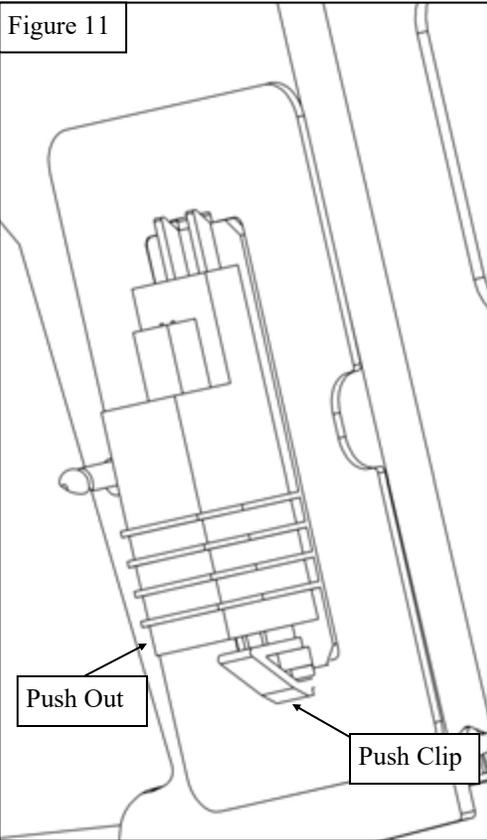

4. Push the light back in until it clips into place. Repeat on the opposite side. **See Figure 13**

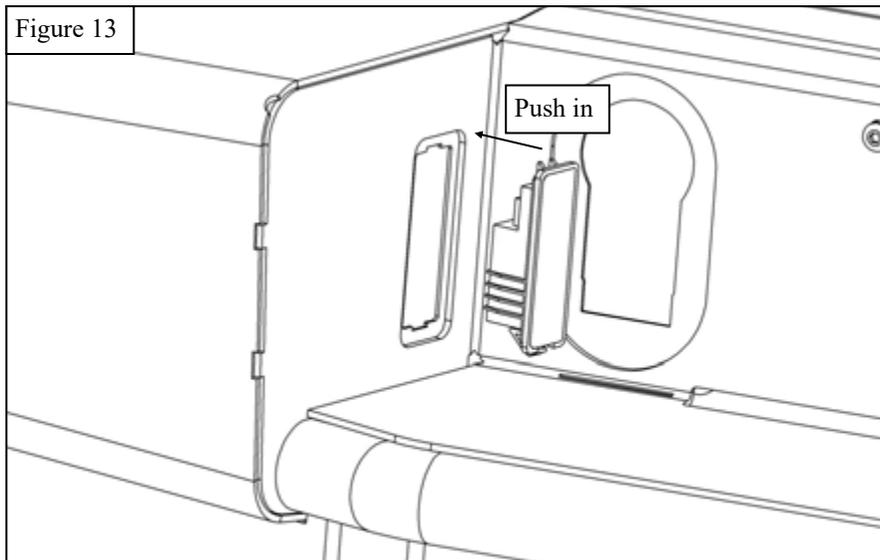

5. Remove the light from the rubber grommet. Install the rubber grommet into the back up light location on the bumper. Then, reinstall the light into the rubber grommet. **See Figure 14-15**
6. Looking at the backside of the lower reverse lights, there are three wires: a ground wire, optional (off road only) tail light wire, and a reverse light (bright) wire. Using the figure below, connect the reverse light wire to the factory reverse light harness, and ground wire to a factory ground wire. If using the optional tail light wire, connect the Tail light wire to a switch. **See Figure 13**
7. Reconnect your battery.

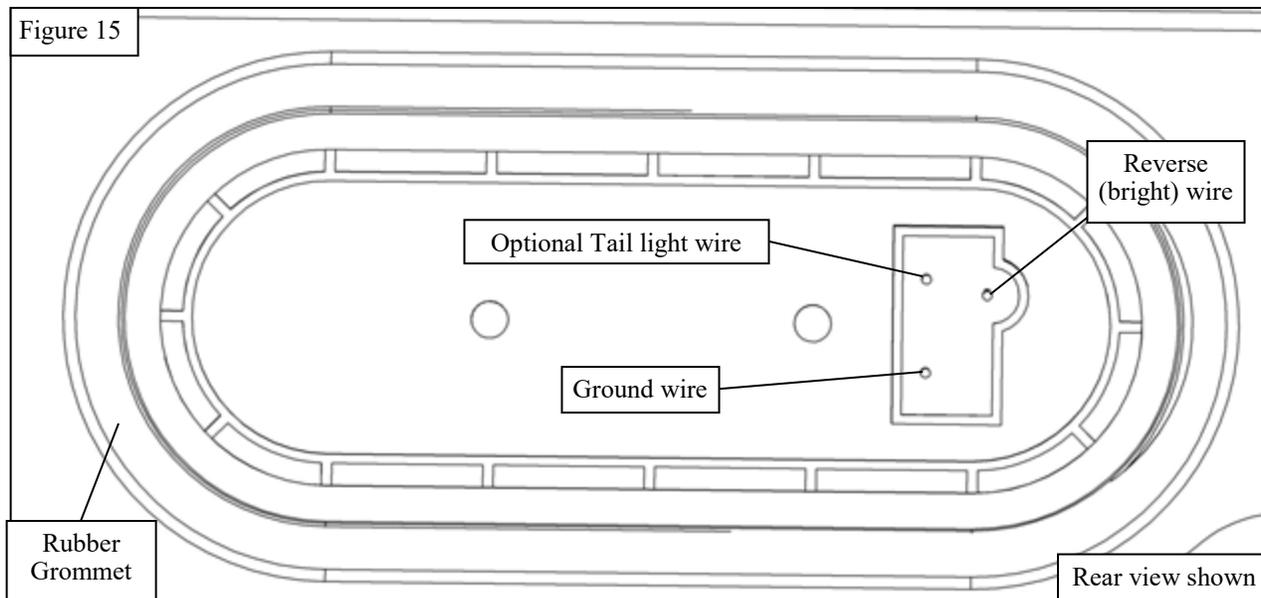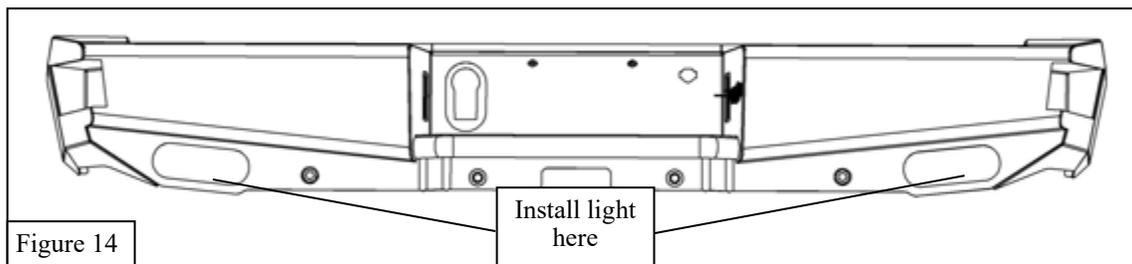

INSTALLATION COMPLETE



#### CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.

**WESTIN** Westin Automotive Products, Inc.  
320 W. Covina Blvd  
San Dimas, Ca. 91773

P.N.: 75-58341155-RevC

ECO #: W25-0173

Thank you for choosing Westin products  
for additional installation assistance please call  
Customer Service (800) 793-7846  
[www.westinautomotive.com](http://www.westinautomotive.com)

DATE: 08/27/2025



## WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

### FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

### DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

### EYE PROTECTION:

**ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.**

### MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

### FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov)



Westin Automotive Products, Inc.  
320 W. Covina Blvd  
San Dimas, Ca. 91773