

## T-Connector Wiring Kit INSTALLATION INSTRUCTIONS

Fits: 2006-2013 Chevrolet Impala

### Kit Includes:

- (1) T-Connector Harness
- (3) 6" Cable Ties
- (1) 15" Cable Tie
- (1) Ground Screw

### INSTALLATION INSTRUCTIONS

#### 1. Read instructions thoroughly before beginning.

2. Open the vehicle's trunk and carefully remove the threshold sill plate (Fig. 1A), taking care not to damage any attachment clips. Pull back on the felt trunk liner on the right (passenger) side to expose the plastic wing nuts holding the tail light in place (Fig. 1B).

3. Remove the wing nuts on the right (passenger) side and carefully pull the tail light assembly away from the vehicle, taking care not to damage the alignment pins.

4. Locate the vehicle wiring harness connectors on the back of the tail light assembly (Fig. 2) that are similar to those on the T-Connector harness. Separate the vehicle connectors from the tail light by pressing on the release tab and pulling the connector away from the tail light housing. Take care not to damage the locking tabs. The connectors should be clean and free of dirt or debris. Clean the connectors if necessary.

5. Insert the T-Connector ends between the separated vehicle connectors, pressing firmly together until they lock into place. Take care not to damage the locking tabs.

6. Locate a clean accessible mounting location on the vehicle within reach of the white wire and drill a 3/32" hole. **Caution: Take care not to drill through the body or any exposed surface.**

7. Mount the white wire using the ground screw and ring terminal provided.

8. Route the remaining portion of the T-Connector down between the bumper and the vehicle body, continuing on behind the bumper to the center of the vehicle. Secure all wires with the cable ties provided.

**Caution: Avoid any exhaust, hot pipes, heat shields, the fuel tank or any other points that might pinch or damage the wires. When routing wire through metal or other sharp surfaces, always utilize an existing grommet, provide a grommet or insulate the wire from the hole with silicone rubber.**

9. Confirm trailer harness operation with a test light or by using a properly equipped trailer.

**Note: All connections must be complete for the T-Connector to function.**

10. Return the tail light assemblies to their original positions, using the plastic wing nuts removed in step 3. Carefully return the felt trunk liner and the threshold sill plate to their original positions, taking care not to damage the locking clips.

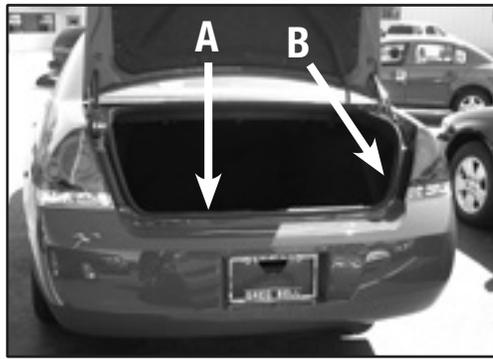


Fig. 1

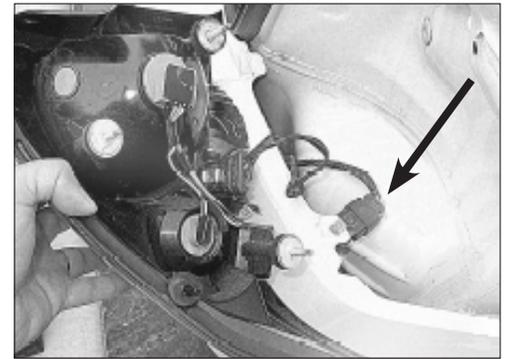


Fig. 2

### ESPAÑOL:

#### INSTRUCCIONES DE INSTALACIÓN

##### 1. Lea las instrucciones a fondo antes de comenzar.

2. Open the vehicle's trunk and carefully remove the threshold sill plate (Fig. 1A), taking care not to damage any attachment clips. Pull back on the felt trunk liner on the right (passenger) side to expose the plastic wing nuts holding the tail light in place (Fig. 1B).

3. Remove the wing nuts on the right (passenger) side and carefully pull the tail light assembly away from the vehicle, taking care not to damage the alignment pins.

4. Locate the vehicle wiring harness connectors on the back of the tail light assembly (Fig. 2) that are similar to those on the T-Connector harness. Separate the vehicle connectors from the tail light by pressing on the release tab and pulling the connector away from the tail light housing. Take care not to damage the locking tabs. The connectors should be clean and free of dirt or debris. Clean the connectors if necessary.

5. Insert the T-Connector ends between the separated vehicle connectors, pressing firmly together until they lock into place. Take care not to damage the locking tabs.

6. Busque un lugar limpio y accesible en el vehículo dentro del alcance del alambre blanco y taladrad un agujero de 3/32". **Precaución: Tenga cuidado de no perforar a través del cuerpo o cualquier superficie expuesta.**

7. Monte el cable blanco usando el tornillo de tierra y el terminal de anillo proporcionado.

8. Route the remaining portion of the T-Connector down between the bumper and the vehicle body, continuing on behind the bumper to the center of the vehicle. Secure all wires with the cable ties provided.

**Caution: Avoid any exhaust, hot pipes, heat shields, the fuel tank or any other points that might pinch or damage the wires. When routing wire through metal or other sharp surfaces, always utilize an existing grommet, provide a grommet or insulate the wire from the hole with silicone rubber.**

9. Confirm trailer harness operation with a test light or by using a properly equipped trailer.

**Note: All connections must be complete for the T-Connector to function.**

10. Return the tail light assemblies to their original positions, using the plastic wing nuts removed in step 3. Carefully return the felt trunk liner and the threshold sill plate to their original positions, taking care not to damage the locking clips.

### FRANÇAIS:

#### INSTRUCCIONES DE INSTALACIÓN

##### 1. Lisez les instructions complètement avant de commencer.

2. Open the vehicle's trunk and carefully remove the threshold sill plate (Fig. 1A), taking care not to damage any attachment clips. Pull back on the felt trunk liner on the right (passenger) side to expose the plastic wing nuts holding the tail light in place (Fig. 1B).

3. Remove the wing nuts on the right (passenger) side and carefully pull the tail light assembly away from the vehicle, taking care not to damage the alignment pins.

4. Locate the vehicle wiring harness connectors on the back of the tail light assembly (Fig. 2) that are similar to those on the T-Connector harness. Separate the vehicle connectors from the tail light by pressing on the release tab and pulling the connector away from the tail light housing. Take care not to damage the locking tabs. The connectors should be clean and free of dirt or debris. Clean the connectors if necessary.

5. Insert the T-Connector ends between the separated vehicle connectors, pressing firmly together until they lock into place. Take care not to damage the locking tabs.

6. Trouver un emplacement de montage propre et accessible sur le véhicule à la portée du fil blanc et percez un trou de 3/32".

**Attention: Prenez soin de ne pas percer le corps ou toute surface exposée.**

7. Montez le fil blanc en utilisant la vis de terre et la borne de bague pourvue.

8. Route the remaining portion of the T-Connector down between the bumper and the vehicle body, continuing on behind the bumper to the center of the vehicle. Secure all wires with the cable ties provided.

**Caution: Avoid any exhaust, hot pipes, heat shields, the fuel tank or any other points that might pinch or damage the wires. When routing wire through metal or other sharp surfaces, always utilize an existing grommet, provide a grommet or insulate the wire from the hole with silicone rubber.**

9. Confirm trailer harness operation with a test light or by using a properly equipped trailer.

**Note: All connections must be complete for the T-Connector to function.**

10. Return the tail light assemblies to their original positions, using the plastic wing nuts removed in step 3. Carefully return the felt trunk liner and the threshold sill plate to their original positions, taking care not to damage the locking clips.