




Flatbed Assembly Instructions


STEP 1: Bolt tailboard and headboard on to flatbed platform using the stainless steel bolts, washers and nuts provided. The holes are predrilled. Be sure to use a stainless flat washer on all aluminum surfaces to eliminate galvanic action from corroding aluminum.

STEP 2: Plug in the prewired tail / reverse lights to the prewired plugs under the platform. The two point plugs run the reverse lights and the three wire plugs run the Stop / Turn / Tail lights.

Then connect the license plate light wires...white to white and black to brown and shrink connector with heat gun.

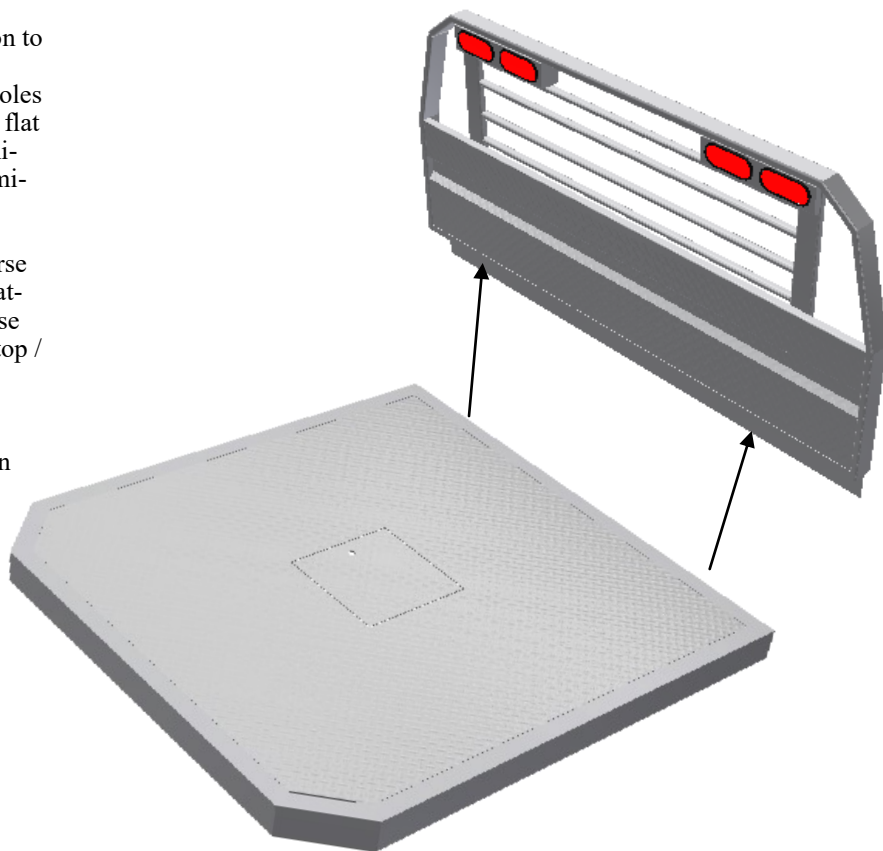

STEP 3: Using the “fish” cable installed in the headboard, fish the wire loom up into the predrilled holes under the front platform. This will pull your wires up in the light boxes (see arrows on diagram above). The lights are prewired with heat shrink connectors. See wiring diagram below.

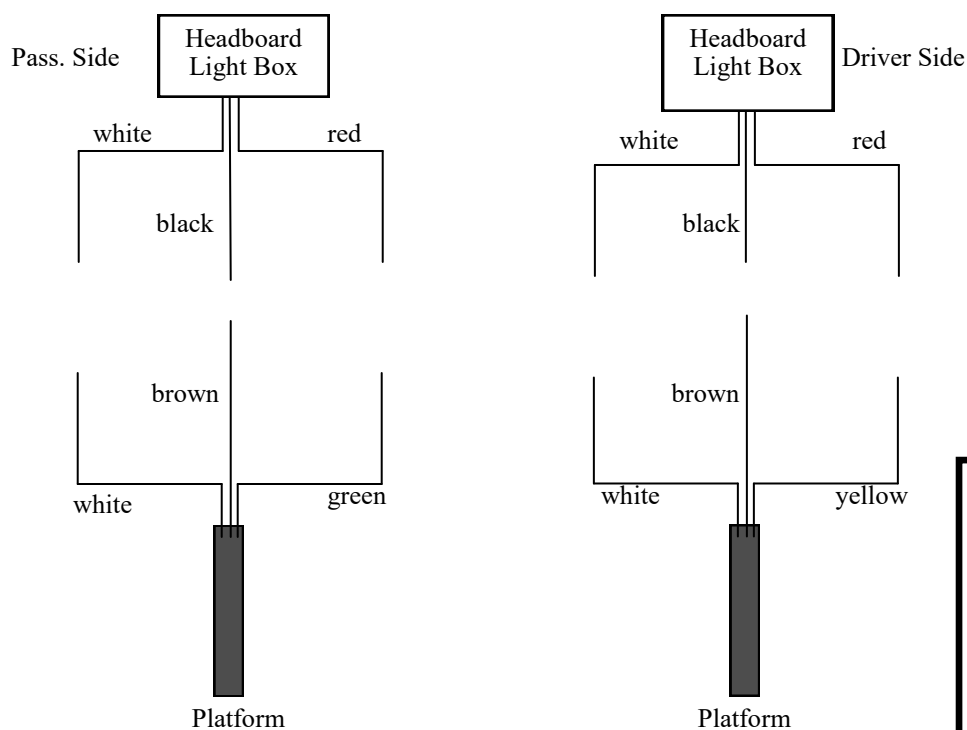

BOLTS LIST

QTY

- S.S. 3/8 x 1-1/4 HEX BOLTS 19
- S.S. 3/8 LOCK NUTS 19
- S.S. 3/8 FLAT WASHERS 38